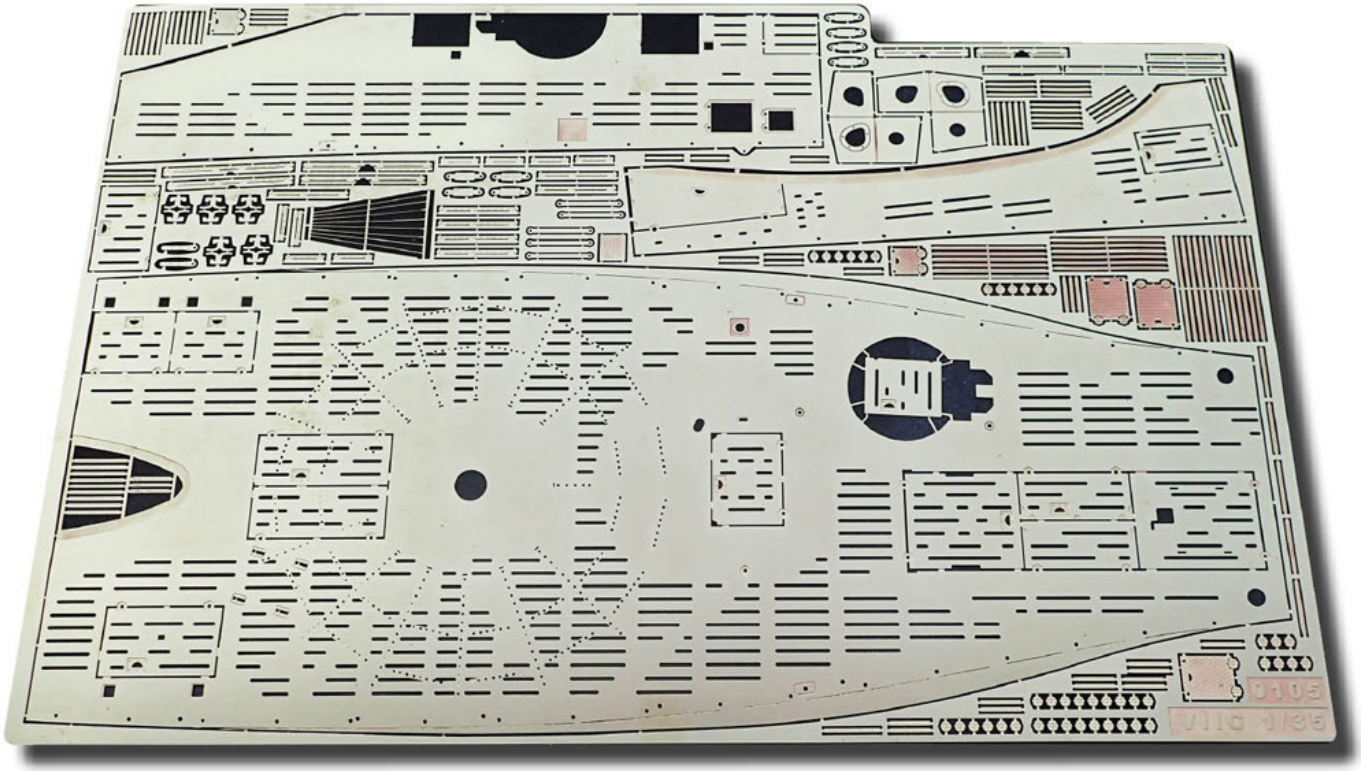
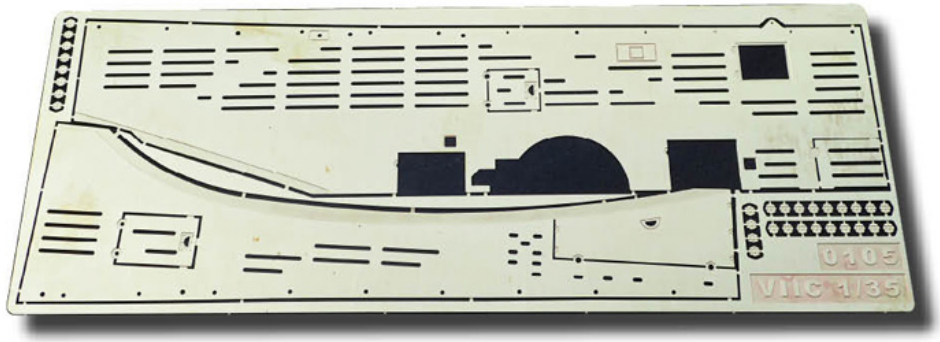


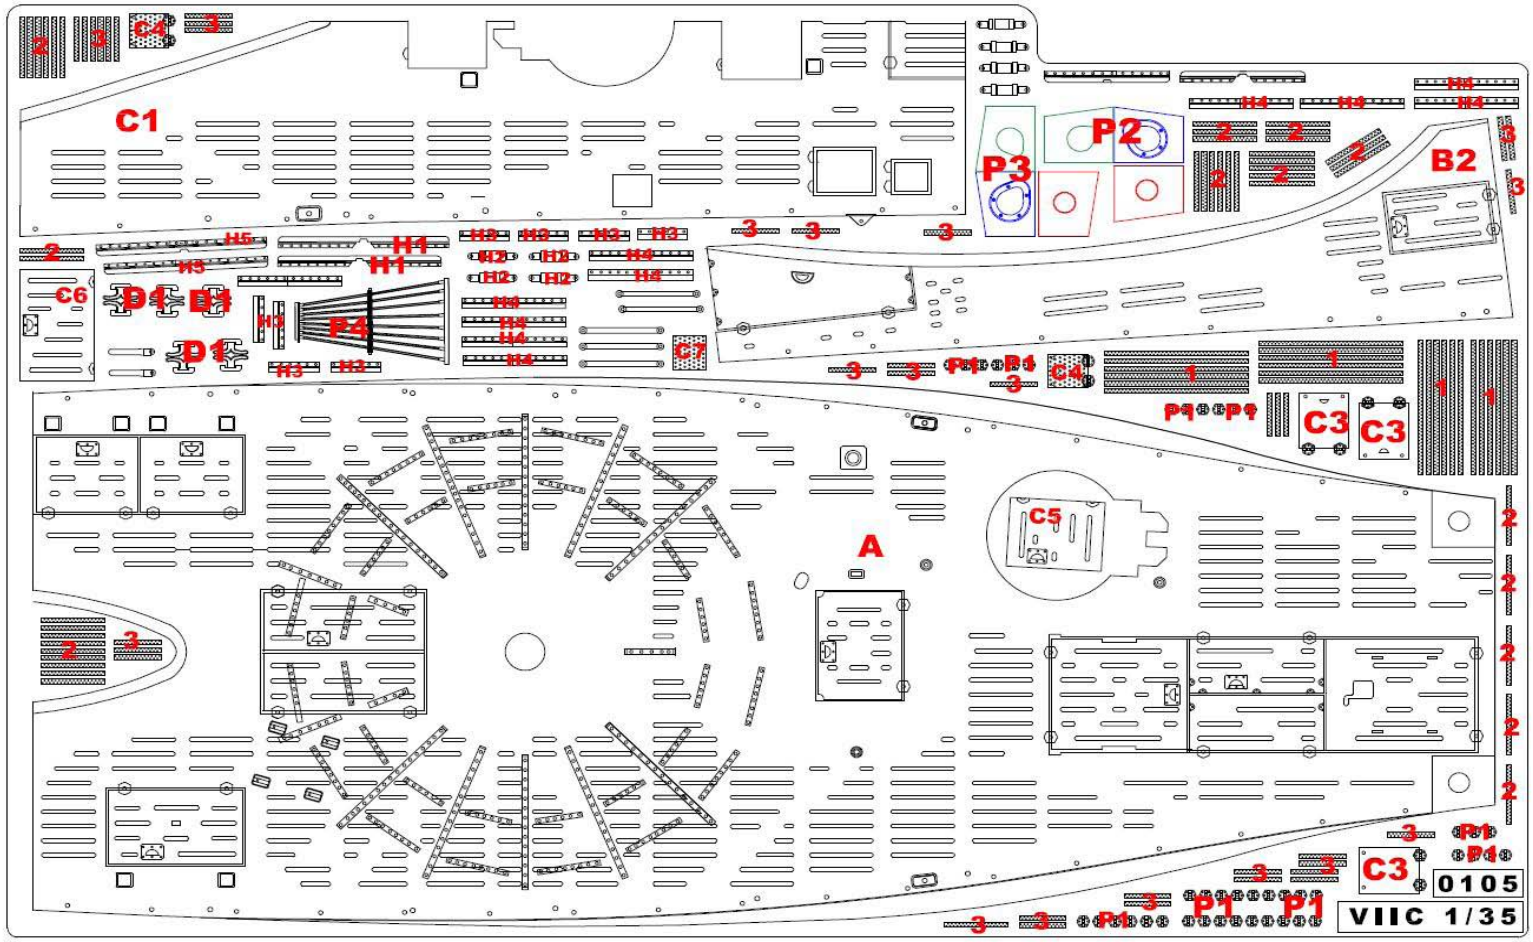
INSTRUCTIONS PHOTO ETCHED DETAILS FOR BORDER BS-001 TYPE: VIIC U-552, U-96, U-82 1/35

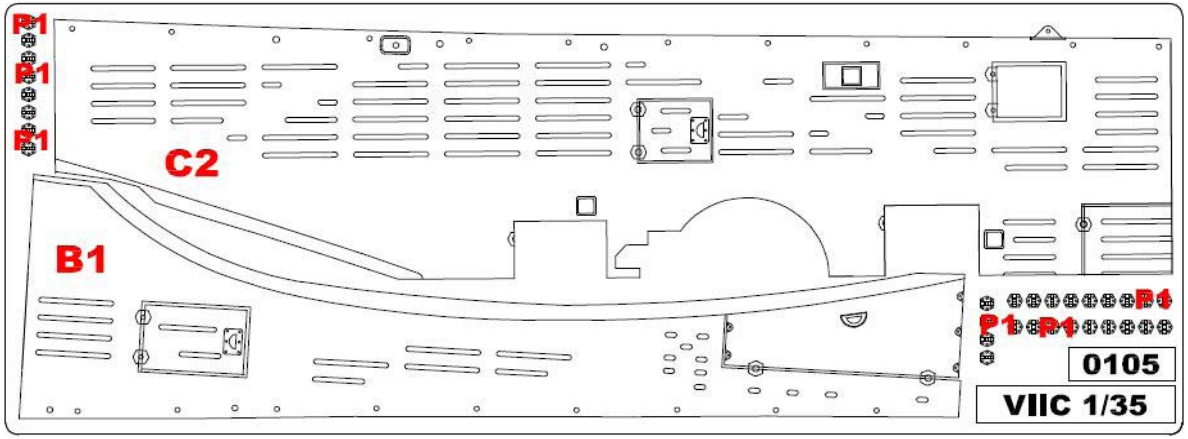
SKU-0105



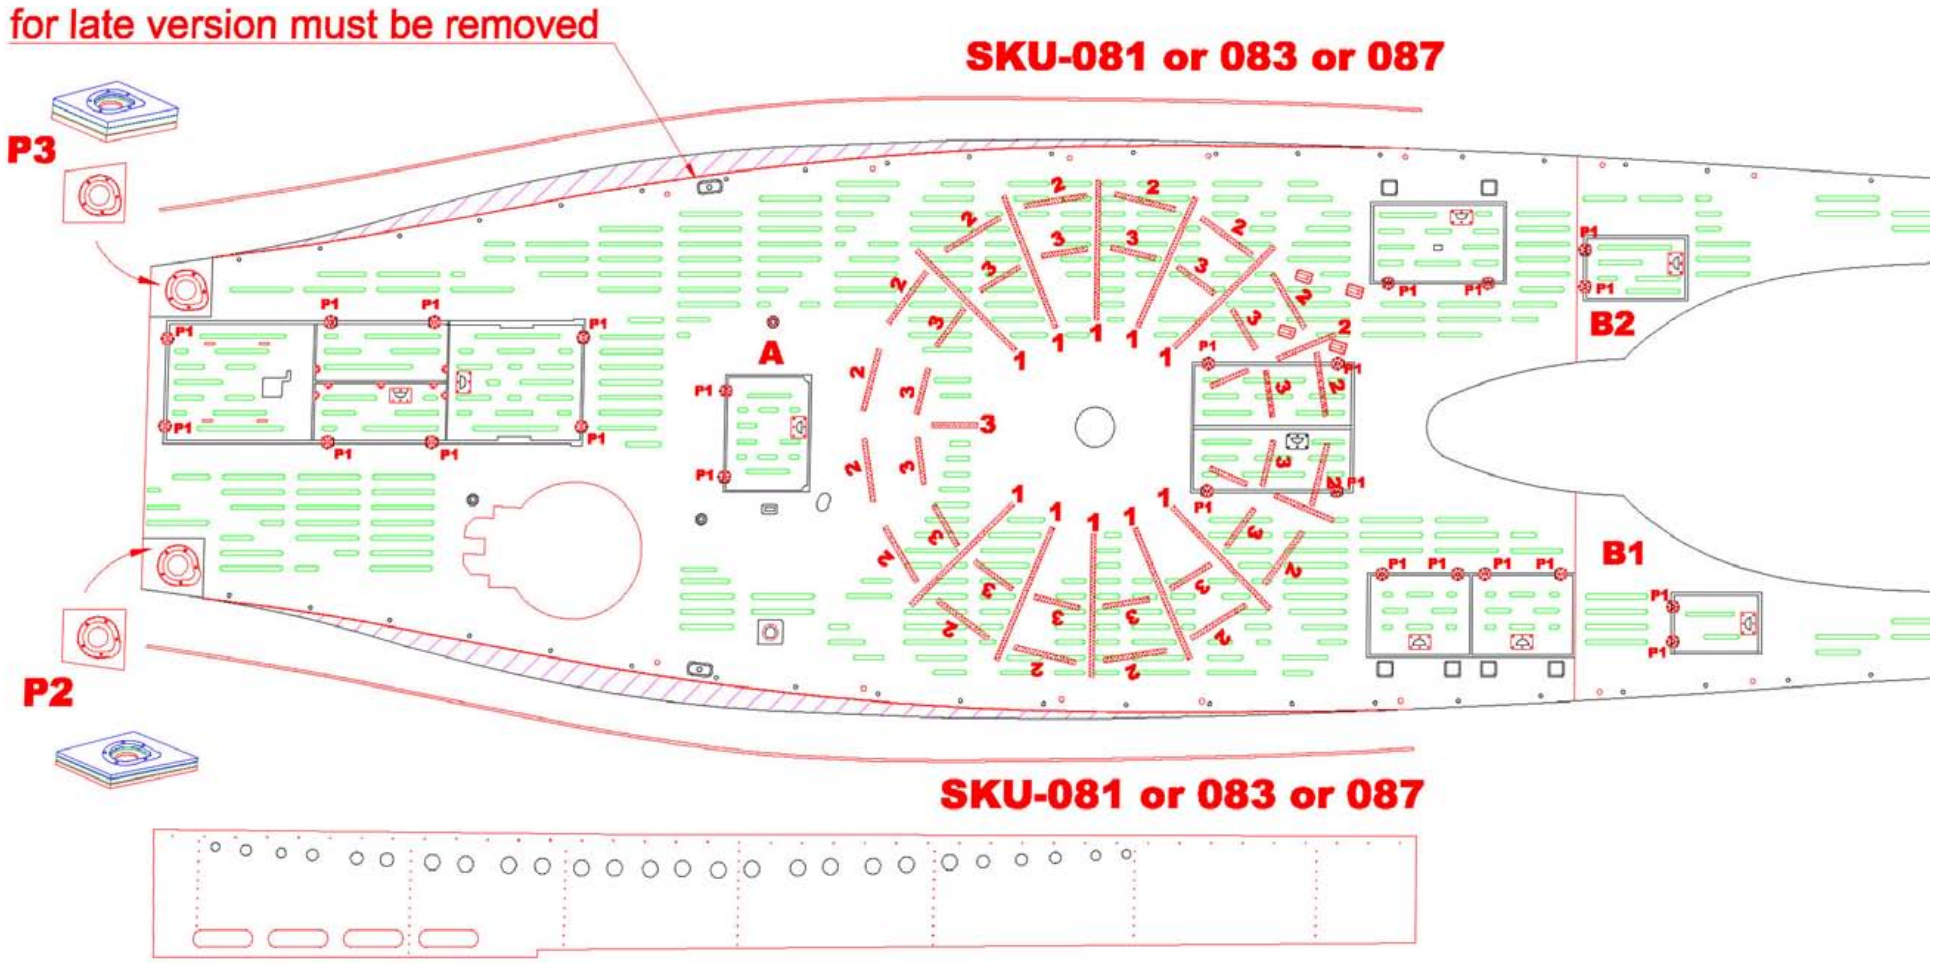


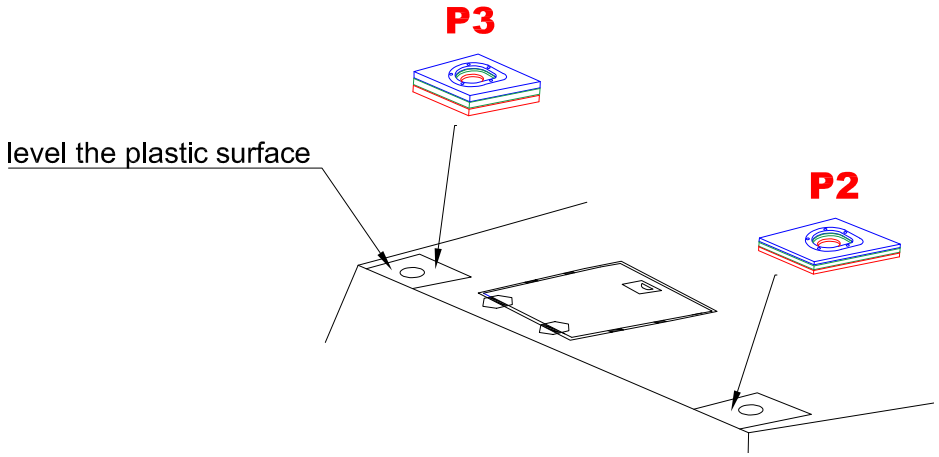
Description of patrs



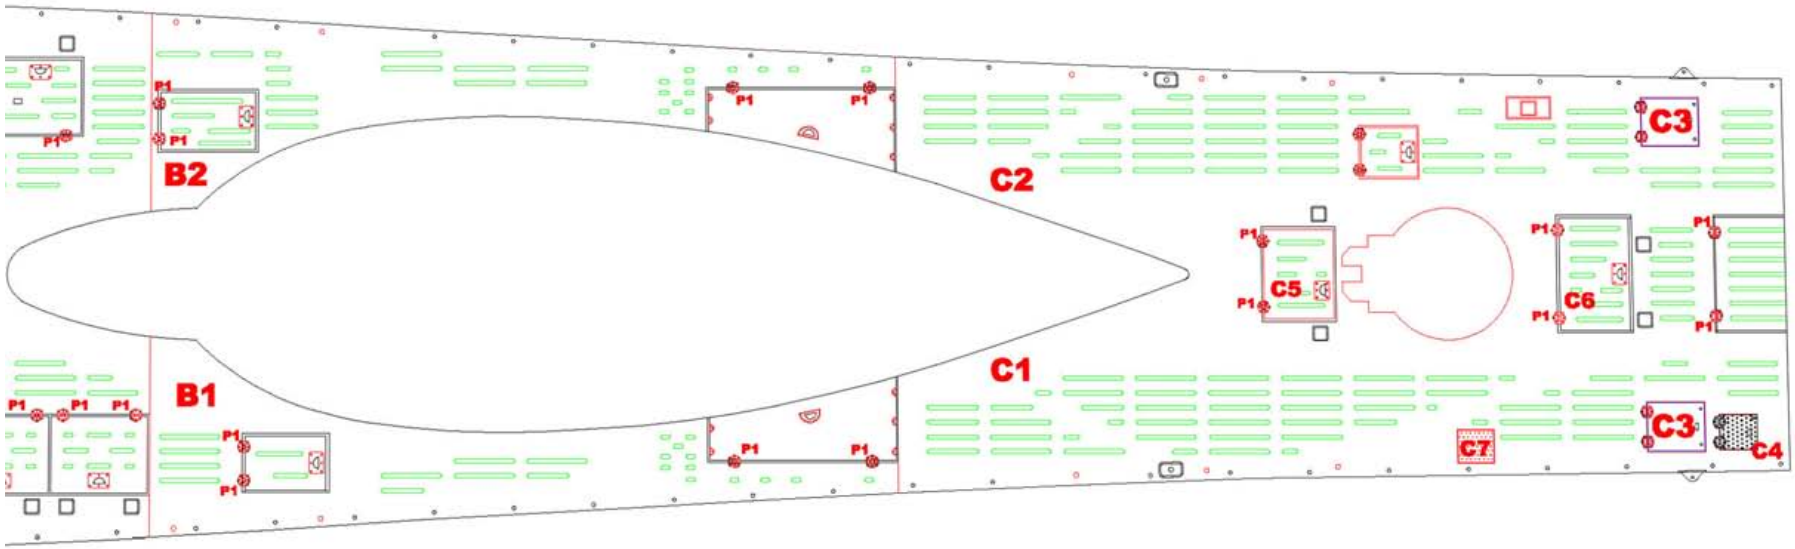


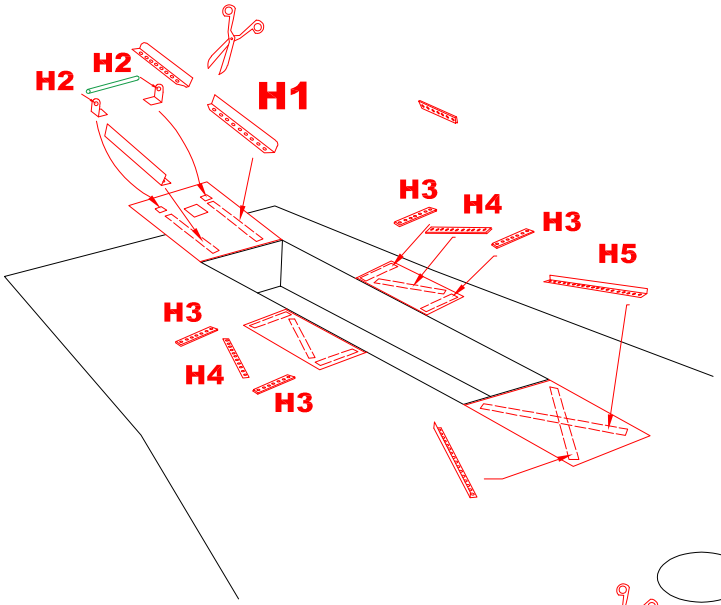
DECK

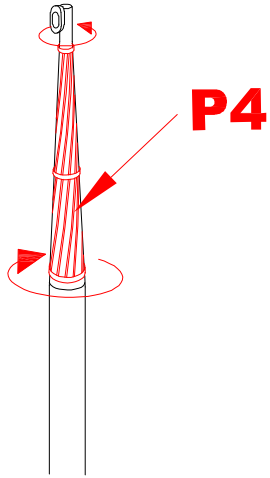

for late version must be removed
SKU-081 or 083 or 087
P3
P2
A
B2
B1
P1
SKU-081 or 083 or 087

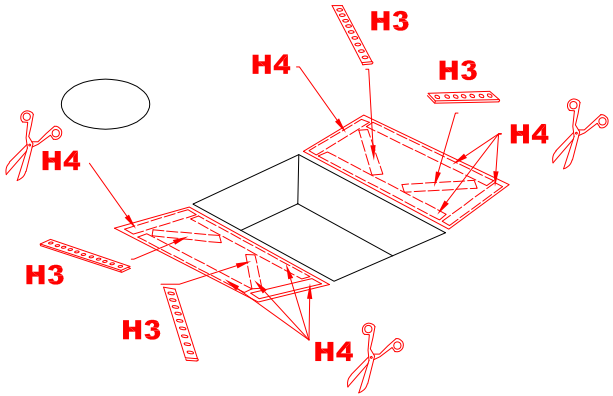

P3
level the plastic surface
P2

DECK


B2
C2
C3
C5
C6
C1
B1
C7
C3
C4
P1


H2
H2
H1
H3
H4
H3
H5
H3
H4
H3


P4


H3
H4
H3
H4
H4
H3
H3
H4



Very early on, the side hull collar was the first to be removed because it increased the submersible time. The Border kit submarine never existed in this design. The side collar of the submarines was also shaped differently and pointed upwards (not flush with the deck).

repair kit for Side Hull VIIC

SKU-081-U-552 **SKU-083-U-96** **SKU-087-U-82**





